
## burster

# Subminiature Load Cell Tension/Compression

Model 8417

Code:8417 ENDelivery:ex stockWarranty:24 months

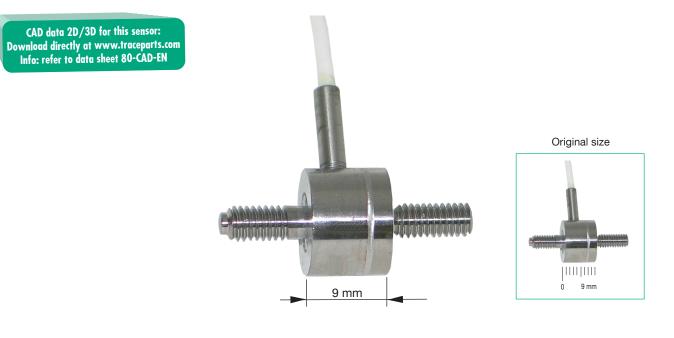

NEW measuring ranges from 0 ... 50 N

#### Measuring ranges from 0 ... 50 N to 0 ... 5 kN

- Very small dimensions
- Made of stainless steel
- Rugged construction
- Simple screw mounting

#### Application

This tension/compression load cell is an especially small component, which can be easily integrated in a girder assembly between two cables or chains for measuring force. The outside threadings along its axis of symmetry can accommodate various adapters or are suitable for screwing into a threaded hole that is quick and easy to produce.

The radial connection cable is extremely flexible and designed for a wide range of motion. In order to achieve the greatest possible stability for such a small sensor, making it suitable not only for the laboratory but also for industrial use, all parts have been welded together including the cable guide bush in the sensor housing.

Typical areas of application include the determining forces in Bowden cable, testing the durability of soldered and welded joints, measuring tractive forces of plug connections or monitoring forces when winding cables onto cable reels.

#### Description

Load cell model 8417 measures the tension or compression force between both axially mounted metric exterior threads on the cylindrical sensor housing. Forces are only applied to the threadings, which are especially long, to accommodate counter nuts and must not be affected by external influences such as bending, lateral force or torsion.

Any contact with units affixed to the sensor housing - even on the front - must be avoided.

The measurement element is a membrane perpendicular to the axis of the sensor with a strain gauge full bridge applied to the inner surface, which requires stable excitation with a rated value of approx. 1.2 mV/V.

The connection cable is fed radially through a sleeve from the housing. Standardization of the output signal in the cable to 1.0 mV/V is optional.



Sth T 使 与 控制 http://www.sensor-ic.com/ TEL:0755-83376549 FAX:0755-83376182 E-MAIL:szss20@163.com

Technical Da	ta	F . / /					1	IL:szss20@163.com
Order Code	Measuring Range	ØD	D H	imensions L	[mm] A	В	Thread T	Weight with / without Cable [g]
8417-5050	0 50 N	12.0	9.0	9.5	14.0	4.1	M 4 x 0.7	20 / 8
8417-5100	0 100 N	12.0	9.0	9.5	14.0	4.1	M 4 x 0.7	20 / 8
8417-5200	0 200 N	12.0	9.0	9.5	14.0	4.1	M 4 x 0.7	20 / 8
8417-5500	0 500 N	12.0	9.0	9.5	14.0	4.1	M 4 x 0.7	20 / 8
8417-6001	0 1000 N	12.0	9.0	9.5	14.0	4.1	M 4 x 0.7	20 / 8
8417-6002	0 2000 N	20.0	12.0	14.0	18.0	6.6	M 6 x 1.0	40 / 28
8417-6005	0 5000 N	20.0	12.0	14.0	18.0	6.6	M 6 x 1.0	40 / 28
lectrical	values				Dimensional d	rawing mod	el 8417	
$\begin{array}{llllllllllllllllllllllllllllllllllll$								
lominal value: measuring ra measuring ra nsulation resista	nge ≥ 0 500	30 mV/V, n 1.2 mV/V, n >						
*Deviations from the stated value are possible.								' <b>†</b>   ⊺
Environmental conditions								
Range of operating temperature:0 °C + 80 °C								
					, ØD ►			
measuring ra			≤±1.5 % F.	S./50 K	The CAD draw	ing (3D/2D) 1	for this senso	r can be imported onli
measuring ra measuring ra	nge ≥ 0 500	≤±2.5 % Rd ≤±1.5 % Rd	directly into your CAD system. Download via www.burster.com or directly at www.traceparts.com For further information about the burster traceparts cooperation refe					
	l values consisting of n stallation position		hysteresis an	id non-	to data sheet 80	)-CAD-EN.		
$ \begin{array}{lll} \mbox{measuring range} & \leq 0 \hdots \begin{tabular}{lll} 500 \mbox{ N} & < \pm \mbox{ 0.9 \% FS.} \\ \mbox{measuring range} & \geq 0 \hdots \begin{tabular}{lll} 1000 \mbox{ N} & < \pm \begin{tabular}{lll} 0.5 \mbox{ \% FS.} \\ \end{tabular} \end{array} $				% F.S.	Order Information Subminiature load cell tension/compression, measuring range 0 500 N Model 8417-550			
ind of measurer Upon operat characteristic	calibration in tens tion against the	ile direction (	direction a c	rection) hanged	Accessories Mating connect	6		
eflection, full scale: max. 60 µm					12 pins, to all burster table housings Model 994			
itatic overload s )verload:	afe:		100 % of c 200 % of c		9 pins, to moo	lel 9235 and	model 9310	Order code: 9900-V2
Dynamic perform	ance: recomme maximum		50 % of c 70 % of c	apacity apacity	•	•		rential usage of the sens ensile direction) Order Code: 990
Material: $1.4542$ Electrical connection:Measuring range $\leq 0 \dots 50$ N shielded,PTFE coated cable with an open end for soldering. Circuit board70 x 8 mm) with balance resistors 30 cm away from the cable's end.					Only for connection to SENSORMASTER model 9163 desktop version Order Code: 990 against preferential direction (positive signal in compressive direction			
	N: shielded, TPE				Only for connect		u c	Oder Code: 990
able length:				2 m	desktop versior			Oder Code: 990
ending radius: 30 mm					Evaluation electronics, amplifiers and process controllers, e.g. digit			
rotection class:	otection class: acc. to EN 60529 IP54					rain gauges n	nodel 9163, 91	80, amplifier module mo
/iring code:	brown green	excitation vol excitation vol signal output signal output	tage n	oositive egative egative oositive	9243 or DIGIFC Strain gauge si adjust amplifier	mulator for c	reating a strai	section 9 of the catal in gauge signal in order Model 94
imensions:	-		refer to c					
eneral tolerance of dimensioning:acc. to ISO 2768-f/eight:refer to table					<b>Option</b> Standardization in preferential direction to 0.8 mV/V $\pm$ 0,25 % in the function of			
orce via the exte	structions arce has to be app rior threading. All nsor as they could	lateral loading	g forces must	be kept	sensor cable. C	only for range	es > 0 500 N	lV0

### Manufacturer Calibration Certificate (WKS)

Calibration of the load cell separately as well as connected to an indicator is available. Calculation consists of basic costs and additional costs per measuring point. Please mention the requested points and the requested direction of load. Standard is an 11 point run in 20 % increments the whole range up and down.

During handling and installation it is important to ensure that the cable outlet and sensor connection cable are not subject to too much tensile or bending force. Effective strain relief may be necessary. Technical SUNSTAR自动化, http://www.sensor-ic.com/ TEL: 0755-83376489 FAX:0755-83376182 E-MAHL:szss200163.0Com 64588

away from the sensor as they could result in incorrect measurements

In order to ensure that the force sensor is securely fitted, it is possible

to affix it to the threading with adhesive. When applying compression

force, appropriate means (e.g. attachments) are to be used to prevent

Latest updates of data sheet always under www.burster.com

or damage.

buckling.